




Transfer reaction mix with binding solution to the spin columns

01

Bind

02

Centrifuge the spin columns

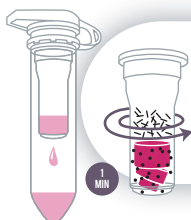


Add wash solution to columns. Spin down

03

Wash

04

Discard flow-through. Wash again. Centrifuge 5 min + 1 min

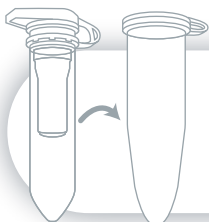

Transfer columns to new microtubes

05

Elute

06

Add nuclease-free water and incubate for 1 min/room temperature



Spin columns for 1 min to elute DNA to the tubes

07